



INSTRUCTIONS

1. Turn fuel valve to off position.
2. Remove old generator by unscrewing generator jamb nut from valve and by removing the two screws from the generator bracket.
3. Position new generator and reattach generator bracket.
4. Tighten generator jamb nut to form leak tight joint. Avoid stripping threads.
5. Check for leak before lighting.

IMPORTANT

After burning the first tank of fuel through your stove, use a wrench to tighten the PACKING NUT $\frac{1}{2}$ turn. This will prevent a possible fuel leak through the PACKING NUT.

The PACKING NUT should need no further tightening, but it's a good idea to look for fuel leaks during each use. If a leak should occur, tighten the PACKING NUT just enough to stop the leak.

