
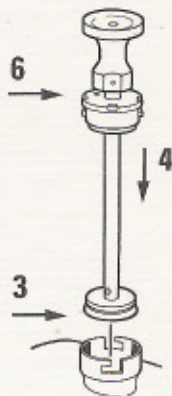


REPLACEMENT PUMP ASSEMBLY ENSEMBLE DE POMPE DE RECHANGE

1. Unlock old pump from tank by turning Pump cap (↺) as shown.
 2. Pull out old pump from tank.
 3. Apply several drops of oil to new Pump cup.
 4. Install new pump into tank being careful not to invert or damage Pump cup.
 5. Lock Pump cap into tank by turning Pump cap (↻).
 6. Add 5-10 drops of oil to hole in Pump cap.
1. Débloquez la pompe usée du réservoir en tournant son bouchon (↺) tel qu'illustré.
 2. Retirez la pompe usée du réservoir.
 3. Mettez plusieurs gouttes d'huile dans le godet de la pompe neuve.
 4. Installez la pompe neuve dans le réservoir en ayant soin de ne pas retourner ou endommager son godet.
 5. Vissez le bouchon de la pompe sur le réservoir pour le bloquer (↻).
 6. Ajoutez de 5 à 10 gouttes d'huile au trou du bouchon de la pompe.

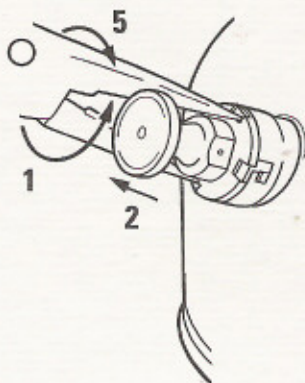

The Coleman Company, Inc.
3600 N. Hydraulic
Wichita, Kansas 67219 U.S.A.
1-800-835-3278
TDD: 316-832-8707

Produit importé par:
The Canadian Coleman Co., Ltd.
15 North Queen Street
Toronto, Canada M8Z 2C6
1 800 387-6161

The Coleman Co., Inc.
International Export Operations
7975 N.W. 154 Street
Suite 440 Miami Lakes,
Florida 33016 U.S.A.
1-305-362-6868

2000-520R

